

OPERATING INSTRUCTIONS

INTERCOM SERIES 100M

GENERAL INFORMATION

It is the User's responsibility to read and operate this Intercom System as outlined in this instruction book. Our local Distributor is not allowed to make calls at your home to demonstrate or explain the operating features of this product. A charge can be made for services of this type. The design of the Series 100 Security Intercom System is compact and very easy to use. The system is extremely versatile with several buyer options at the time of installation some of which might not be available to the user.

BASIC OPERATION

The basic system includes the MASTER UNIT (Model 100M) and one DOOR ENTRY SPEAKER (Model S3). The purpose of this combination is to initiate and maintain two way voice communication from inside the home to the door entry speaker.

1. To Talk to the Door Entry Speaker from the Master Unit
 - A. Position the SYSTEM VOLUME at the 1 o'clock Position
 - B. Turn the SPEAKER VOLUME to near "FULL ON"
 - C. PRESS and "HOLD IN" the DOOR BUTTON and.....
 - D. PRESS the TALK BUTTON to TALK, RELEASE it to LISTEN

DOOR CHIME OPTION

Some Models of the Master Unit contain either a 3-Note or 8-Note Door Chime. The door entry speaker (Model S3B) also has a Door Bell Button. To hear the door chime the speaker volume control in the Master Unit must be in the near full "ON" position at all times.

ROOM SPEAKERS

Room Speakers (Model 255) can be added to the Basic System. Systems that feature room speakers can talk one to another as well as monitor the door chimes and initiate calls to the door entry speaker.

1. To Use the Room Speakers
 - A. Turn the VOLUME control to the near FULL ON Position
 - B. To Talk to other rooms
 - a. Press the LISTEN/TALK button and HOLD while Talking
 - b. Release the LISTEN/TALK button to receive calls
 - C. To Talk to the Door Speaker
 - a. Press the DOOR/ON button down and "HOLD IN" the down Position
 - b. Press the LISTEN/TALK button to Talk, Release to Listen

SYSTEMS WITH ELECTRIC DOOR RELEASE

Some installations include an electric door release. From the Master Unit or any of the special Room Speakers (Model 255D) the door latch at the outside entry door can be momentarily released from the locked position to allow an authorized visitor to enter.



A NORTEK COMPANY

